

---

# User Guide

Nokia 105

**NOKIA**

## Psst...

This guide isn't all there is...

For the online user guide and troubleshooting help, go to [www.nokia.com/mobile-support](http://www.nokia.com/mobile-support).

For info on HMD Global Service terms and Privacy policy, go to [www.nokia.com/mobile-privacy](http://www.nokia.com/mobile-privacy).

---

# User Guide

Nokia 105

## Contents

<b>Psst...</b>	<b>2</b>
<b>For your safety</b>	<b>4</b>
<b>Get started</b>	<b>5</b>
Keys and parts	5
Insert the SIM card and battery	5
Charge the battery	6
Switch your phone on	7
Lock the keys	8
Change the volume	8
<b>Basics</b>	<b>10</b>
Explore your phone	10
Write text	11
Use predictive text	11
Change the ringtone	12
<b>People &amp; messaging</b>	<b>13</b>
Make or answer a call	13
Save a name and phone number	13
Save numbers in five separate phonebooks	14
Send and receive messages	14
<b>Entertainment</b>	<b>15</b>
Listen to the radio	15
<b>Office</b>	<b>16</b>
Set an alarm	16
<b>Phone management &amp; connectivity</b>	<b>17</b>
Remove private content from your phone	17
<b>Product and safety info</b>	<b>18</b>

# For your safety

Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further info, read the complete user guide.



## **SWITCH OFF IN RESTRICTED AREAS**

Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.



## **ROAD SAFETY COMES FIRST**

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



## **INTERFERENCE**

All wireless devices may be susceptible to interference, which could affect performance.



## **QUALIFIED SERVICE**

Only qualified personnel may install or repair this product.



## **BATTERIES, CHARGERS, AND OTHER ACCESSORIES**

Use only batteries, chargers, and other accessories approved by HMD Global for use with this device. Do not connect incompatible products.



## **KEEP YOUR DEVICE DRY**

Your device is not water-resistant. Keep it dry.



## **PROTECT YOUR HEARING**

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

# Get started

Get to grips with the basics, and have your phone up and running in no time.

## Keys and parts

Explore the keys and parts of your new phone.

- 1 Charger connector
- 2 Flashlight
- 3 Headset connector (3.5 mm)
- 4 Screen
- 5 Scroll key
- 6 End/Power key
- 7 Microphone
- 8 Keypad
- 9 Call key
- 10 Selection keys
- 11 Earpiece



## Insert the SIM card and battery

Read on to learn how to insert a SIM card into your phone.


1. Switch the phone off, and remove the back cover.



2. If the battery is in the phone, lift it out.



3. Slide the SIM under the holder with the contact area face down.

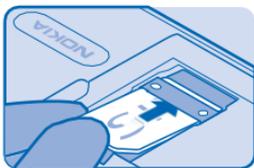

4. Line up the battery contacts, and push the battery in.



5. Press the back cover down until it locks into place.



6. To switch on, press and hold  until the phone vibrates.



## Charge the battery

Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone.

1. Plug the charger into a wall outlet.



2. Connect the charger to the phone. See 5 on page 18. When done, unplug the charger from the phone, then from the wall outlet.



## Switch your phone on

Ready? Switch your phone on, and start using it.

1. Press and hold the power key.



2. To set the time, press up or down. Press **OK**.



3. To set the date, press up or down. Press **OK**. Your phone is now ready.



## Lock the keys



Lock the keys when not using your phone.

1. Select **Menu**, and press \*.



2. To unlock, select **Unlock**, and press \*.



## Change the volume

You can control the audio in several ways.

1. Scroll left or right to change the volume.



2. You can connect a compatible headset or other compatible device to the headset connector.



3. To use the loudspeaker on your phone when calling, select **Loudsp.**. You can also use the loudspeaker when listening to radio.



# Basics

Learn how to get the most out of your new phone.

## Explore your phone

Explore your phone with a simple key press.

1. To see the apps and features of your phone, press **Menu**.



2. To go to an app or feature, press the scroll key up, down, left, or right.




3. To open the app or select the feature, press **Select**.



4. To go back to the previous view, press **Back**.



5. To go back to the home screen, press **Home**.

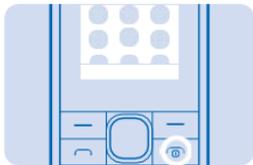

6. To use the flashlight, press the scroll key up twice. To switch off, press up once. Do not shine the light in anyone's eyes.



## Write text

Writing with the keypad is easy and fun.

Press a key repeatedly until the letter is shown.

### Type in a space

Press **0**.

### Type in a special character or punctuation mark

Press and hold **\***.

### Switch between character cases

Press **#** repeatedly.

### Type in a number

Press and hold **#**. To go back to letter mode, press and hold **#**.

## Use predictive text

To speed up your writing, your phone can guess what you are starting to write. Predictive text is based on a built-in dictionary. This feature is not available for all languages.

1. Select **Options > Dictionary** and the language.
2. Start writing a word. When the word you want is shown, press **0**.

### Change a word

Press **\*** repeatedly until the word you want is shown.

### Add a new word to the dictionary

If the word you want isn't in the dictionary, write the word, select **Spell**, and type in the word.

### Switch between predictive and traditional text

Press **#** repeatedly.

## Switch predictive text off

Select **Options** > **Dictionary** > **Dictionary off**.

## Change the ringtone

Set a different ringtone for each profile.

1. Select **Menu** > **Settings** > **Tone settings**.



2. Select **Ringing tone**.



3. Pick a ringtone, and select **OK**.



 **Tip:** To switch quickly to silent profile, press and hold #.

# People & messaging

Contact your friends and family, and share files, such as photos, using your phone.

## Make or answer a call

Read on and learn how to make or answer a call with your new phone.

1. Type in the phone number.


To type in the + character, used for international calls, press \* twice.



2. Press  to make the call. To end the call, press .



3. When someone calls you, press  to answer.

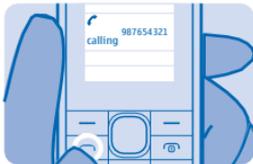


## Save a name and phone number

Add a new name and number to your phone.

1. Press **Menu**, and select **Contacts**.



## 2. Select **Add contact**.

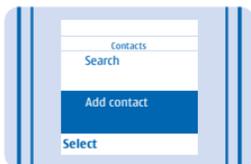

## 3. Write the name, and press **OK**, then type in the number, and press **OK**.



## Save numbers in five separate phonebooks

To use separate phonebooks, save contacts in the phone memory.

1. Press **Menu**, and select **Contacts > Settings**.
2. To use the phone memory, select **Memory in use > Phone**.
3. Select **Multi-Phonebook > Phonebook style > Multi-Phonebook**.
4. To add a contact to a phonebook, press **Menu**, and select **Contacts > Settings**.
5. Select **Multi-Phonebook > Manage contacts**.
6. Select a contact, and mark a phonebook.
7. Press **Done**, and save the changes.

### Select which phonebook to use

Select **Multi-Phonebook > Current phonebook** and the phonebook you want to use.

### Rename a phonebook

Select **Multi-Phonebook > Rename phonebooks** and the phonebook, write the name, and press **OK**.

## Send and receive messages

Keep in touch with your friends and family through text messages.

1. Select **Menu > Messages**.
2. Select **Create message**.
3. Write your message.
4. Select **Options > Send**.
5. Type in a phone number, and select **OK**. Your message is sent.
6. To read a received message, select **Show** on the home screen.
7. To read the rest of the message, press down.

You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, and limit the number of characters that can be sent in a single message.

# Entertainment

Having a spare moment and in need of entertainment? Learn how to listen to the radio on your phone.

## Listen to the radio

Use your phone to listen to the radio.

1. Connect a headset, and select **Menu > Radio**. The headset cable works as the radio antenna.



2. To go to the next channel, press down.



3. To close the radio, press **Options**, and select **Switch off**.



# Office

Learn how to use the calendar to keep yourself organised.

## Set an alarm

Use your phone as an alarm clock.

1. Select **Menu > Clock > Set alarms**.



2. Select an alarm.



★ **Tip:** You can set up to five different alarms.

3. To set the hour, press up or down. To set the minutes, press right and then up or down. Press **OK**.



# Phone management & connectivity

Take care of your phone and its contents. Learn how to connect to accessories and networks, transfer files, create backups, lock your phone, and keep the software up to date.

## Remove private content from your phone

If you buy a new phone, or otherwise want to dispose of or recycle your phone, here's how you can remove personal info and content.

When removing private content from your phone, pay attention to whether you are removing content from the phone memory or the SIM card.

1. To remove messages, select **Menu > Messages > Delete messages**.
2. Go to the folder you want to empty, and select **Delete all** or **All read**. To remove all messages from your phone, empty all the folders separately.
3. To remove contacts, select **Menu > Contacts > Delete > Delete all** and the location.
4. To remove call info, select **Menu > Call register > Delete recent call lists > All**.
5. Check that all your personal content has been removed.

### Remove all content from your phone and restore the original settings

To reset your phone to its original settings and to remove all your data, on the home screen, type in **\*#7370#**.

# Feature-specific information

- 1 The images in this guide may differ from your device screen.
- 2 The antenna area is highlighted.
- 3 Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.
- 4  **Important:** This device is designed to be used with a standard SIM card (see figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout.



- 5 If the battery is completely discharged, it may take up to 20 minutes before the charging indicator is displayed.
- 6 Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.
- 7  **Note:** You can set the phone to ask for a security code. The pre-set code is 12345, but you can change it to protect your privacy and personal data. Note, however, that when you change the code, you need to remember the new code, as HMD Global is not able to open or bypass it.

## Product and safety info

### Network services and costs

You can only use your device on the GSM 900, 1800 networks. You need a subscription with a service provider.

You may also need to subscribe to some features.

### Emergency calls

- 1  **Important:** Connections in all conditions cannot be guaranteed. Never rely solely on any wireless phone for essential communications like medical emergencies.

Before making the call:

- Switch the phone on.
  - If the phone keys are locked, unlock them.
  - Move to a place with adequate signal strength.
1. Press the end key repeatedly, until the home screen is shown.
  2. Type in the official emergency number for your present location. Emergency call numbers vary by location.
  3. Press the call key.
  4. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:

- Put a SIM card in the phone.
- If your phone asks for a PIN code, type in the official emergency number for your present location, and press the call key.
- Switch the call restrictions off in your phone, such as call barring, fixed dialling, or closed user group.
- To make an emergency call during the first start-up, select **Opt. > Make emerg. call**.

### Take care of your device

Handle your device, battery, charger and accessories with care. The following suggestions help you keep your device operational.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and let the device dry.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device or battery.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.
- Do not open the device other than as instructed in the user guide.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device or the battery. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can prevent proper operation.
- For optimal performance, switch the device off and remove the battery from time to time.
- Keep the device away from magnets or magnetic fields.
- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info.

## Recycle



Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. All materials of the device can be recovered as materials and energy.

### Crossed-out wheeled-bin symbol



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority, or go to [www.nokia.com/mobile-support](http://www.nokia.com/mobile-support).

## Battery and charger info

Use your device only with an original BL-5CB rechargeable battery.

Charge your device with AC-11X or AC-11N charger. Charger plug type may vary. HMD

Global may make additional battery or charger models available for this device.

- ! **Important:** Talk and standby times are estimates only. Actual times are affected by, for example, network conditions, device settings, features being used, battery condition, and temperature.

## Battery and charger safety

Always switch the device off and unplug the charger before removing the battery. To unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm.

## Small children

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

## Medical devices

Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices' function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy.

## Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Switch the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

## Hearing

 **Warning:** When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids.

## Protect your device from harmful content

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.
- Be cautious when accepting connectivity requests, browsing the internet, or downloading content.
- Only install and use services and software from sources that you trust and that offer adequate security and protection.
- Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a time. Using more may affect performance and operation of the device and/or computer.
- If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. HMD Global does not endorse or assume liability for such sites.

## Vehicles

Radio signals may affect improperly installed or inadequately shielded electronic systems in vehicles. For more info, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable or explosive materials in the same compartment as the device, its parts, or accessories. Do not place your device or accessories in the air bag deployment area.

## Potentially explosive environments

Switch your device off in potentially explosive environments, such as near petrol pumps. Sparks may cause an explosion or fire resulting in injury or death. Note restrictions in areas with fuel; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked. These usually are areas where you are advised to switch your engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles. Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

## Certification information (SAR)

**This mobile device meets guidelines for exposure to radio waves.**

For information on SAR, see the printed user guide.

## Original accessories

For availability of approved accessories, check with your dealer.

### Practical rules about accessories

- Keep all accessories out of the reach of small children.
- When you disconnect the power cord of any accessory, hold and pull the plug, not the cord.
- Check regularly that accessories installed in a vehicle are mounted and are operating properly.
- Installation of any complex car accessories must be made by qualified personnel only.

### Battery

Type: BL-5CB

Talk time:

Up to 12.53 hours.

Standby:

Up to 35 days.

**!** **Important:** Battery talk and standby times are estimates only. Actual battery talk and standby times depend on SIM cards, features used, battery age and condition, temperatures to which the battery is exposed, network conditions, and many other factors, and may be significantly shorter than those specified above. Ringtones, hands-free call handling, and other features consume the battery. The amount of time a device is used for calls affects its standby time, and the amount of time that the device is switched on and in standby mode affects its talk time.

## Copyrights and other notices

### Declaration of Conformity

# CE 0168

Hereby, HMD Global Oy (Ltd.) declares that this RM-908 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [www.nokia.com/mobile-declaration-of-conformity](http://www.nokia.com/mobile-declaration-of-conformity).

The availability of products, features, apps and services may vary by region. HMD Global may, in its sole discretion, change,

© 2016 HMD Global. All rights reserved.

correct or discontinue any of its services in whole or in part. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

TM © 2016 HMD Global. All rights reserved. Nokia is a registered trademark of Nokia Corporation. Third party products/ names may be TMs of their respective owners.