V754Q/C751Q Installation Guide

[Ver.1.0]

Contents:

ASCII Commands Page 11 Control Codes Page 12 Cable Connection Page 12		
Ventilation RecommendationsPage 2Carrying Handle PositioningPage 2Display DimensionsPage 2Front, Top, Right Side, Left Side, BottomPage 3Back SidePage 4Display Dimensions with standPage 5Optional Stand DimensionsPage 6Optional Wall Mount DimensionsPage 7-8Optional Speaker Dimensions (SP-TF1)Page 9Compute Module IntegrationPage 10Input PanelPage 11ASCII CommandsPage 12Cable ConnectionPage 12	Product Description and Notes	Page 1
Ventilation RecommendationsPage 2Carrying Handle PositioningPage 2Display DimensionsPage 2Front, Top, Right Side, Left Side, BottomPage 3Back SidePage 4Display Dimensions with standPage 5Optional Stand DimensionsPage 6Optional Wall Mount DimensionsPage 7-8Optional Speaker Dimensions (SP-TF1)Page 9Compute Module IntegrationPage 10Input PanelPage 11ASCII CommandsPage 12Cable ConnectionPage 12	Rotation	Page 1
Display Dimensions Page 3 Front, Top, Right Side, Left Side, Bottom Page 3 Back Side Page 4 Display Dimensions with stand Page 5 Optional Stand Dimensions Page 6 Optional Wall Mount Dimensions Page 7-8 Optional Speaker Dimensions (SP-TF1) Page 9 Compute Module Integration Page 10 Input Panel Page 11 ASCII Commands Page 12 Cable Connection Page 12		
Display Dimensions Page 3 Front, Top, Right Side, Left Side, Bottom Page 3 Back Side Page 4 Display Dimensions with stand Page 5 Optional Stand Dimensions Page 6 Optional Wall Mount Dimensions Page 7-8 Optional Speaker Dimensions (SP-TF1) Page 9 Compute Module Integration Page 10 Input Panel Page 11 ASCII Commands Page 12 Cable Connection Page 12	Carrying Handle Positioning	Page 2
Back SidePage 4Display Dimensions with standPage 5Optional Stand DimensionsPage 6Optional Wall Mount DimensionsPage 7-8Optional Speaker Dimensions (SP-TF1)Page 9Compute Module IntegrationPage 10Input PanelPage 11ASCII CommandsPage 12Cable ConnectionPage 12		
Display Dimensions with standPage 5Optional Stand DimensionsPage 6Optional Wall Mount DimensionsPage 7-8Optional Speaker Dimensions (SP-TF1)Page 9Compute Module IntegrationPage 10Input PanelPage 11ASCII CommandsPage 12Coable ConnectionPage 12	Front, Top, Right Side, Left Side, Bottom	Page 3
Display Dimensions with standPage 5Optional Stand DimensionsPage 6Optional Wall Mount DimensionsPage 7-8Optional Speaker Dimensions (SP-TF1)Page 9Compute Module IntegrationPage 10Input PanelPage 11ASCII CommandsPage 12Coable ConnectionPage 12	Back Side	Page 4
Optional Wall Mount DimensionsPage 7-8Optional Speaker Dimensions (SP-TF1)Page 9Compute Module IntegrationPage 10Input PanelPage 11ASCII CommandsPage 11Control CodesPage 12Cable ConnectionPage 12		
Optional Wall Mount DimensionsPage 7-8Optional Speaker Dimensions (SP-TF1)Page 9Compute Module IntegrationPage 10Input PanelPage 11ASCII CommandsPage 11Control CodesPage 12Cable ConnectionPage 12	Optional Stand Dimensions	Page 6
Compute Module IntegrationPage 10Input PanelPage 11ASCII CommandsPage 11Control CodesPage 12Cable ConnectionPage 12		
Input Panel Page 11 ASCII Commands Page 11 Control Codes Page 12 Cable Connection Page 12	Optional Speaker Dimensions (SP-TF1)	Page 9
Input Panel Page 11 ASCII Commands Page 11 Control Codes Page 12 Cable Connection Page 12	Compute Module Integration	Page 10
ASCII Commands Page 11 Control Codes Page 12 Cable Connection Page 12		
Control Codes Page 12 Cable Connection Page 12		
Cable Connection Page 12		Page 12
		Page 12
		Page 13



Product Description:

Туре:	LCD Display		
Resolution:	3840 x 2160	Dimensions without stand:	66.2" (W) x 37.8" (L) x 2.8" (D)
Aspect Ratio:	16:9	Dimensions with stand:	66.2"(W) x 39.2"(H) x 23.9"(D)
EMI:	Class B	Weight without stand:	116.0 lbs. / 52.6kg
Power Consumption:	340W (Max V754Q), 375W (Max, C751Q)	Weight with stand:	126.1 lbs. / 57.2kg
BTU's:	1160.13 BTU/hour (V754Q), 1279.55 BTU/hou	ur (C751Q)	

NOTES:

- This document is intended to be used as a reference guide to supply useful information for a design or installation. It is not intended to be • a step-by step procedure for installation.
- Any ceilings or walls must be strong enough to support the monitor and the installation must be in accordance with any local • building codes. All mounts should make secure contact to wood studs.
- Distances are in inches, for millimeters multiply by 25.4.
- Distances may vary ±5%. •

Tilt Angle and Rotation:

Below is the maximum angle the monitor can be tilted. Note that the monitor can only be tilted in the landscape position. •





V754Q/C751Q



Ventilation Recommendations:

Dimensions below are minimum required for proper ventilation.



NOTE:

• The ventilation space should not be covered or closed off at the front of the opening. If for some reason the opening needs to be covered, other means of ventilation will need to be incorporated into the design. Contact NEC for design review and recommendations.

Carrying Handle Positioning:

Changing handles position

- Factory set position.
- Alternate position.
- CAUTION: Four or more handles are required when transporting.

V754Q





Display Dimensions:





Display Dimensions (cont.):



NEC strongly recommends using size M8 screws (15-17mm + the thickness of the bracket and washers in length). If using screws longer than 15-17mm, please check the depth of the hole.





Display Dimensions (with optional ST-801 stand):





Table Top Stand Dimensions (ST-801):







Optional Slim Wall Mount (WMK-3255S):



Optional Large Wall Mount (WMK-6598):





Optional Standard Wall Mount (WMK-3257):







Optional Speaker Dimensions (SP-TF1)



V754Q/C751Q



Compute Module Integration:

- Door on the back of the display can be opened by loosening captive screws.
- Separate IO Board is necessary to accompany RPi Compute Module in unit







Input Panel:

Bottom



Side (Rotated)



ASCII Common Commands:

• This monitor supports common ASCII control commands with many other NEC projectors. For more information on this, please see our website.

Parameter

Input command

Input signal name	Response	Parameter
DisplayPort1	DisplayPort1	DisplayPort1 or DisplayPort
DisplayPort2	DisplayPort2	DisplayPort2
HDMI1	hdmi1	hdmi1 or hdmi
HDMI2	hdmi2	hdmi2
HDMI3	hdmi3	hdmi3
MP	mp	mp
OPTION	option	option

Status command

Response	Error status
error:temp	Temperature abnormal
error:fan	Cooling fan abnormal
error:light	Inverter or backlight abnormal
error:system	System error



Control Codes:

Function (Monitor ID = 1)	Code Data
Power ON	01 30 41 30 41 30 43 02 43 32 30 33 44 36 30 30 30 31 03 73 0d
Power OFF	01 30 41 30 41 30 43 02 43 32 30 33 44 36 30 30 30 34 03 76 0d
Input Source Select DisplayPort1	01 30 41 30 45 30 41 02 30 30 36 30 30 30 30 46 03 04 0d or 01 30 41 30 45 30 41 02 31 31 30 36 30 30 30 46 03 04 0d
Input Source Select DisplayPort2	01 30 41 30 45 30 41 02 30 30 36 30 30 30 31 30 03 73 0d or 01 30 41 30 45 30 41 02 31 31 30 36 30 30 31 30 03 73 0d
Input Source Select HDMI1	01 30 41 30 45 30 41 02 30 30 36 30 30 30 31 31 03 72 0d or 01 30 41 30 45 30 41 02 31 31 30 36 30 30 31 31 03 72 0d
Input Source Select HDMI2	01 30 41 30 45 30 41 02 30 30 36 30 30 30 31 32 03 71 0d or 01 30 41 30 45 30 41 02 31 31 30 36 30 30 31 32 03 71 0d
Input Source Select HDMI3	01 30 41 30 45 30 41 02 30 30 36 30 30 30 38 32 03 78 0d or 01 30 41 30 45 30 41 02 31 31 30 36 30 30 38 32 03 78 0d
Input Source Select MP	01 30 41 30 45 30 41 02 30 30 36 30 30 30 38 37 03 7D 0d or 01 30 41 30 45 30 41 02 31 31 30 36 30 30 38 37 03 7D 0d
Input Source Select OPTION	01 30 41 30 45 30 41 02 30 30 36 30 30 30 30 44 03 06 0d or 01 30 41 30 45 30 41 02 31 31 30 36 30 30 30 44 03 06 0d
Sound Mute ON	01 30 41 30 45 30 41 02 30 30 38 44 30 30 30 31 03 09 0d
Sound Mute OFF	01 30 41 30 45 30 41 02 30 30 38 44 30 30 30 32 03 0a 0d

NOTE: Contact your NEC representative for codes not listed.

Cable Connection

Communication Protocol:

Interface:	
Communication System:	
Baud Rate:	
Data Length:	
Parity:	None
Stop Bit	
Communication Code:	

RS-232C Asynchronous 9600 bps 8 bits 1 bit

ASCII

Interface: Communication System: Communication Layer: IP Address: Port Number: Ethernet (CSMA/CD TCP/IP (Internet Protocol Suite) Transport layer (TCP) 192.168.0.10 (default out of box) 7142 (Fixed)







Browser Control:

Information and control can also be available through the HTTP browser control menu. In order to accomplish this, type: http://<the Monitor's IP address>/pd_index.html Note that the LAN Power needs to be turned on in order for the display to be controlled while the units are off. All displays are set to the IP address 192.168.0.10 out of the box

Communicating network PC needs to be on the same subnet as display that is being communicated with



HDMI1

HOME	номе		
REMOTE CONTROL			
PICTURE ADJUST AUDIO SCHEDULE	Welcome to the management and You can use the navigation menu	d configuration web interface. s on the left to access additional pages.	
MULTI PICTURE CONTROL	MONITOR INFORMA	TION	
OSD MULTI DISPLAY	MODEL NAME		
DISPLAY PROTECTION EXTERNAL CONTROL	SERIAL	45500005TA	
ADVANCED OPTION1 ADVANCED OPTION2			
	FIRMWARE VERSION	N	
MAIL	FIRMWARE1	0.017	
NETWORK MAIL SIMP AMX CRESTRON NAME NETWORK PASSWORD PD LIST	FIRMWARE2	0.008	
	FIRMWARE3	0.011	
	FIRMWARE4	0.002	
MEMO UPDATE FIRMWARE			
PORT UPDATE FIRMWARE(ALL)	ETHERNET		
OFDATE FINHWARE(ALL)	MAC ADDRESS	58:C2:32:33:00:03	
	IPv4 ADDRESS	192.168.0.10	
	SUBNET MASK	255.255.255.0	
	DEFAULT GATEWAY	0.0.0	
	DNS PRIMARY	0.0.0	
	DNS SECONDARY	0.0.0	

ID

Copyright © NEC Display Solutions, Ltd. 2014. All rights reserved.